

AIR MOUSE REMOTE CONTROL

VZ-RK-1 User Manual



1. Main specification

Voltage : 3V (2*AAA)
Quiescent Current : <30uA
Working Current : >15mA
Maximum Distance : >25M
Working Frequency : 2.4G

2. Pair

Please insert the dongle to the usb port of the set top box or PC, press **[OK]** and **[Back]** key at the same time, hold on for three seconds if the light flash 3 times it means the remote and usb dongle has been paired. If failed, the light will be fast-speed flash, 30 seconds later flash will be off and quit automatically.

3. CPI adjustment

CPI means mouse the speed of mouse pointer, CPI has four grades 1, 2, 3, 4, factory default is grade 2, the higher grades, the faster speed.

In the highest and the lowest grade mode light without flash.

- Press **[OK]** and **[Vol+]** for 3 seconds, release it after light flash two times, CPI increase 1 grade.

AIR MOUSE REMOTE CONTROL

- Press [OK] and [Vol-] key for 3 seconds, release it after light flash two times, CPI decrease a grade.

4. Gyro calibration

If find mouse point can't work properly, please refer to the below tips to re-adjust the gyro:

Take off the batteries, press [V] and [F] key at the same time and put the batteries in, light flash 3 times means in the gyro adjustment mode. Please put the remote control on a plane level without shake, a few seconds later light will flash 3 times again and off, it means gyro calibration finished. If can't work, please check if your plane level or the desk move.

5. Usage of the Left key and Enter key on the front side


The mouse function can work once we put in batteries, [OK] key means the enter, press [Left]/[right]/[up]/[down] keys for 3 seconds, mouse will be turned off. Any keys for wake up air mouse.

6. IR&RF switch



The factory default of the remote is RF model after put in batteries, press to  change between IR and RF.

- Light flash one time means both side of the remote control under RF mode.
- Light flash three times with high speed means both side of the remote control under IR mode.

7. IR learning function

Switch the remote control under IR mode, all of the keys on the front side have learning function except . Press [OK] and [2] light is glimmering, three seconds later, light will be bright, press any key to learn.

8. Restore factory setting

Press [OK] and  at the same time, light is on after three seconds, release [OK] and  keys light is off, several seconds later, light will be on, it means restore factory setting finished.